

# ADJUSTABLE POST WRAP



TUSCAN  
MANUFACTURING

## INSTALLATION INSTRUCTIONS

### Step 1 Safety Precautions

Review all local building codes.  
Wear proper safety equipment.

### Step 2 Prepare Mounting Surfaces


Make sure wood post is correctly installed.  
Check post surface for obstructions (nails, screws, etc.) before covering post. (See Figure 1).  
For min/max post wrap adjustment, see Technical Specifications.

### Step 3 Cut Vinyl Post Wrap

Measure wood post to be wrapped and cut the Vinyl Post Wrap to the required finished length. (See Right) ASSEMBLED POST WRAPS ARE DESIGNED WITH A POSITIVE LOCKING FEATURE; ENSURE YOU ARE PREPARED FOR FINAL INSTALLATION PRIOR TO PROCEEDING.




### Step 4 Install Vinyl Post Wrap

Start at one corner and insert male end into female end. (See Figure 2) Snap tight together until all four sections are installed. (See Figure 3)

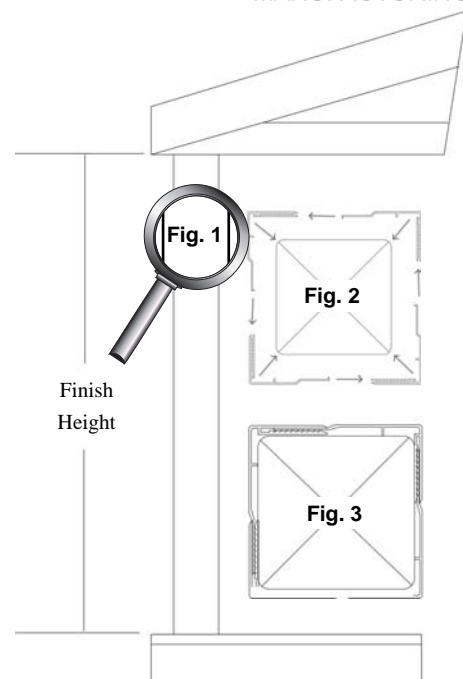

## Technical Specifications

### 4" Post Wrap

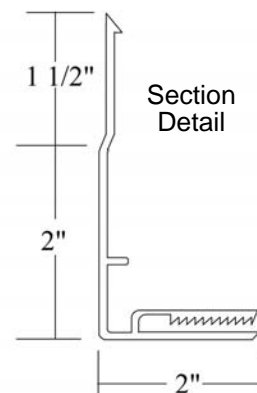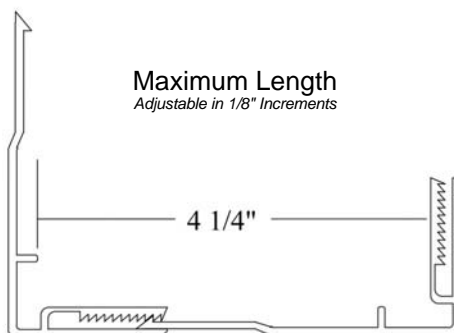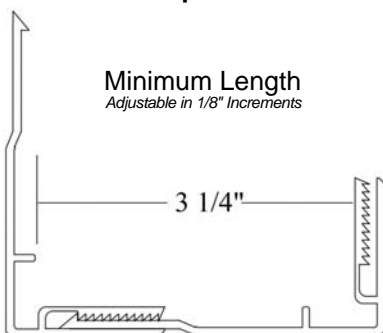

### 6" Post Wrap

